



Accessory list

Nano three-slides wire basket basket dish basket	Side left & right Isel	Plastic tray	connecting fixing for tray	Cover for slide	S14*16 tapping screw 8pcs	<ul style="list-style-type: none"> Pan head wooden screw 4pcs M8x8 screw 4 pcs 	<ul style="list-style-type: none"> Plastic rear hook 2pcs Chopsticks box 	<ul style="list-style-type: none"> Clip-on bar left/right Isel
---	------------------------	--------------	----------------------------	-----------------	---------------------------	--	--	---


Runner Installation

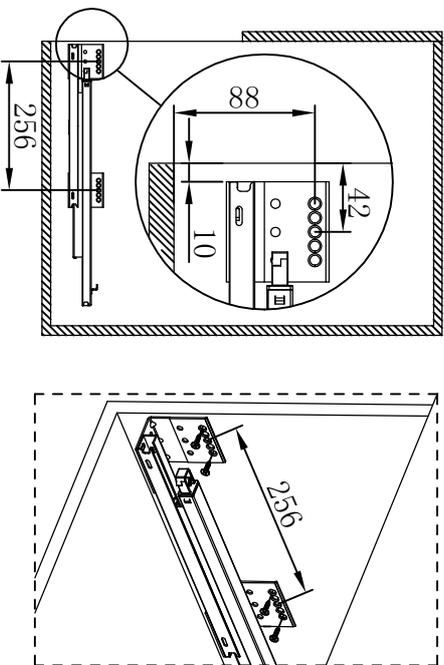

Door panel connector installation

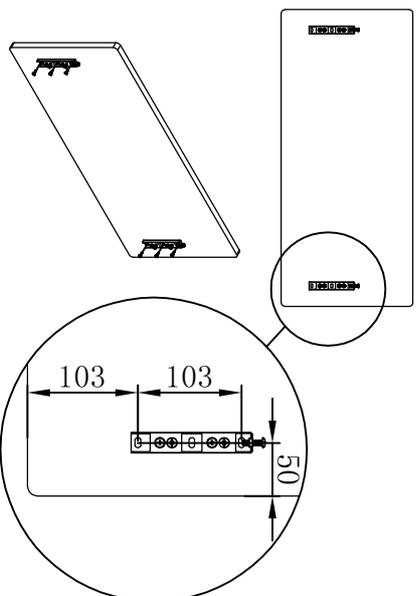


Rear hook plastic, dish tray and chopsticks box(dish basket) installation

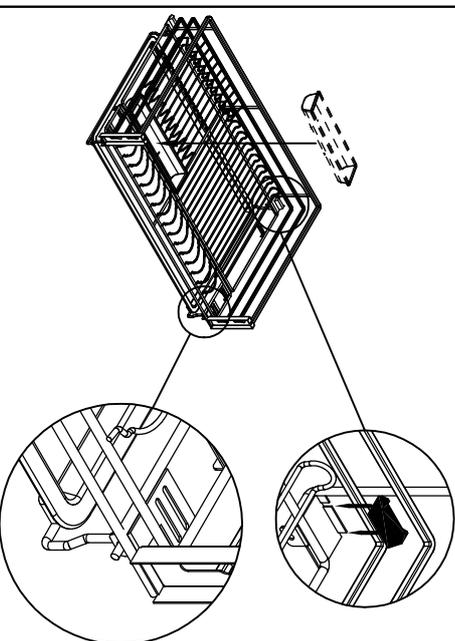

1. Fix the slides to both side panels with 8pcs of s14*16 tapping screw.


Clip-on fitting(runner cover) installation

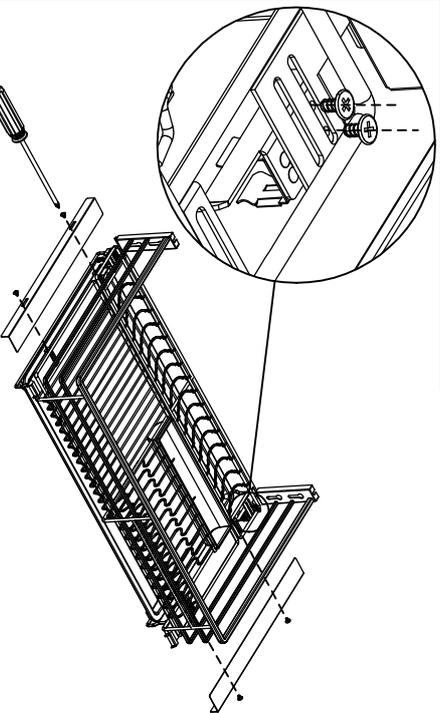

4. Fasten the clip-on fittings to the basket with 4pcs M4*8 countersunk screws.
(fix the runner covers to both sides of the basket with 4pcs M4*6 pan head tapping screws.)

2. Fix the door panel connector to the door panel with 6 S14*16 countersunk head tapping screws.


Door and basket installation

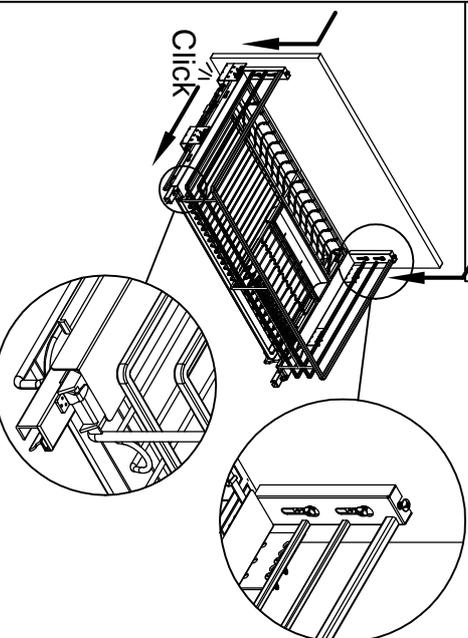

5. Hang the door panel onto the basket and push the basket to the end of the runner.

3. Connect the dish tray to the basket with the connector, and then attach the rear hook plastic adapter(chopsticks box).

Up and down, left and right, front and back adjustment of door panel

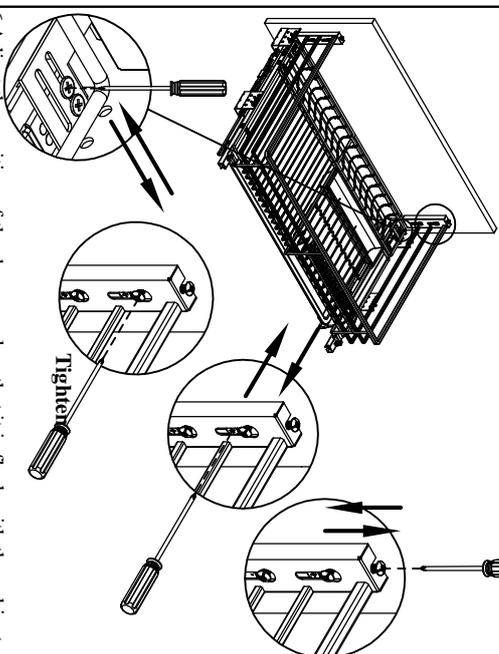

6. Adjust the position of the door panel so that it is flush with the cabinet.